

DOVETAIL DRAWER ADJUSTMENTS & REMOVAL

PUSH THE TAP UP AND BACK TO RAISE THE DRAWER FRONT (WHICH ALSO RAISES THE DRAWER BOX)

PUSH THE TAP UP AND FORWARD TO LOWER THE DRAWER FRONT (WHICH ALSO LOWERS THE DRAWER BOX)

RELEASE THE TAB ONCE THE DRAWER FRONT IS AT THE DESIRED POSITION.

1 **2**

ADJUSTMENT
+3mm

ROTATE THE MECHANISM LEVER ON THE BACK OF THE DRAWER BOX OUTWARD (AS SHOWN) TO TILT THE TOP OF THE DRAWER FRONT INWARD.

ROTATE THE MECHANISM LEVER ON THE BACK OF THE DRAWER BOX INWARD TO TILT THE TOP OF THE DRAWER FRONT OUTWARD.

TILT
ADJUSTMENT

SQUEEZE FRONT LOCK RELEASE FOR DRAWER REMOVAL

1 **2**

CAM INSERT

LOOSEN SCREWS TO ADJUST DRAWER FRONT SIDE-SIDE &/or UP-DOWN

COMPLETELY REMOVE SCREWS TO REMOVE DRAWER FRONT